



# InfoSight

## LabeLase<sup>®</sup> 1000P Plate Printer

### Basic Operations & Maintenance Manual



**Revision B**  
October 2007

**INFOSIGHT CORPORATION**  
20700 U.S. Route 23  
P.O. Box 5000  
Chillicothe, Ohio 45601 USA  
+1.740.642.3600 Tel. (M-F 8am-5pm US Eastern Time Zone)  
+1.740.642.4666 Emergency Service (outside normal business hours)  
+1.740.642.5001 Fax.

**[www.infosight.com](http://www.infosight.com)**

## **COPYRIGHT**

Copyright© 2007 INFOSIGHT CORPORATION  
All rights reserved, Printed in U.S.A.

First Printing: February 2007

INFOSIGHT CORPORATION reserves the right to make changes in specifications and other information contained in this manual without prior notice, and the reader should consult INFOSIGHT CORPORATION to determine whether any such changes have been made.

In no event shall INFOSIGHT CORPORATION be liable for any incidental, indirect, special, or consequential damages whatsoever (including but not limited to lost profits) arising out of, or relating to this manual or the information contained in it, even if INFOSIGHT CORPORATION has been advised, knew, or should have known of the possibility of such damages.

INFOSIGHT CORPORATION expressly warrants the equipment manufactured by it as set forth in the Standard Terms and Conditions of Sale. INFOSIGHT CORPORATION makes no other warranties, either expressed or implied (including without limitation warranties as to merchant ability or fitness for a particular purpose).

InfoTag®, Labelase® and PermaLabel® are registered trademarks of InfoSight Corporation.  
Labelase® Producer™, HotTag™ and X-Tag™ are trademarks of InfoSight Corporation.  
Windows® is a registered trademark of Microsoft Corporation.

## **SOFTWARE/FIRMWARE LICENSE AGREEMENT**

**IMPORTANT:** THE SUBJECT PROGRAMS ARE LICENSED BY INFOSIGHT CORPORATION TO END-USERS FOR THEIR USE ONLY ON THE TERMS BELOW. ACCEPTING AND USING THESE PROGRAMS INDICATES YOUR ACCEPTANCE OF THESE TERMS. THIS IS A LEGAL AGREEMENT BETWEEN YOU, THE END USER, AND INFOSIGHT CORPORATION.

- 1) **GRANT OF LICENSE.** INFOSIGHT CORPORATION ("INFOSIGHT") agrees to grant to you a non-exclusive license to use the INFOSIGHT software/firmware program (the "PROGRAM") subject to the terms and conditions of this license agreement.
- 2) **DEFINITION OF TERMS.** The term SOFTWARE refers to a computer program stored on CDROM, floppy diskette, hard disk, magnetic tape, paper tape or other media, that must be loaded into the computer's memory to be executed. The term FIRMWARE refers to a computer program stored in semiconductor memory (ROM, PROM, EPROM, EEPROM, NVRAM, etc.) that is an integral part of the computer's memory. Together, these forms of computer programs are referred to as the "PROGRAM".
- 3) **COPYRIGHT.** The PROGRAM(s) and Documentation are owned by INFOSIGHT and are protected by United States copyright laws and international treaty provisions. The PROGRAM(s) contain trade secrets and proprietary property of INFOSIGHT. You may make one copy of the PROGRAM(s) solely for backup or archival purposes provided that the copy clearly displays the INFOSIGHT copyright notice. Additional copies may be made when authorized to do so in writing by INFOSIGHT. In addition to any other right of INFOSIGHT, INFOSIGHT has the right to terminate this license if the terms of this license are violated.
- 4) **RESTRICTION ON USE AND TRANSFER.** The single-processor version(s) of the PROGRAM(s) and Documentation are to be used on one computer or embedded system at any one time. The multi-processor version(s) of the PROGRAM(s) and Documentation may be used over a network provided that the number of computers accessing the network simultaneously shall not exceed the number authorized by INFOSIGHT or for which you paid the corresponding multi-processor fee. You may not distribute the programs or Documentation to a third party. You may transfer the license and complete package (retaining nothing) if the transferee agrees to the terms of this License Agreement. Neither the PROGRAM(s) nor the Documentation may be changed or translated without express written permission of INFOSIGHT. You may not reverse engineer, decompile or disassemble the PROGRAM(s).
- 5) **WARRANTY** for the subject PROGRAM(s) is covered under the INFOSIGHT STANDARD TERMS AND CONDITIONS OF SALE.
- 6) **TERM.** The license is effective until terminated. It may be terminated if you fail to comply with any term or condition of this License Agreement. You may terminate this License Agreement at any time. In the event of termination, you agree to destroy the PROGRAM(s) and Documentation together with all copies and related material.
- 7) **YOUR USE OF THIS PROGRAM(S)** acknowledges that you have read this License Agreement and agree to its terms. This agreement is complete and supersedes any other agreement that may have related to the subject matter of this agreement.

## PREFACE / WHAT'S NEW

The LABELASE® 1000P series Plate Printer is fifth in the family of InfoSight laser tag markers. The LABELASE® 1000P series contains many new features, including:

- **the ability to print on die-cut tags of irregular shape through the use of interchangeable carrier plates (LL1000 model suffix P);**
- **RoHS compliance (additional suffix R);**
- **a 2.5 mil nominal laser spot size for printing in finer detail (as compared to the standard 3 mil spot size) and to be compliant with US Govt UID specifications (additional suffix S);**
- **an optional integrated USB/ethernet communications module in addition to the standard RS232 serial interface (additional suffix U).**

For simplicity, all versions of the Plate Printer are referred to in this manual as LL1000P. The additional suffixes R, S and U do not change the basic functioning of the marker or Producer™ software, unless otherwise stated explicitly.

This OPERATIONS AND MAINTENANCE manual is intended as a companion to the ONLINE REFERENCE MANUAL supplied with the Producer software and also available on the web at <http://www.infosight.com/labelaseproducer/index.htm>

This OPERATIONS AND MAINTENANCE manual will be automatically installed on your computer hard drive when installing the Producer™ software. It may be found under the PROGRAMS menu with other INFOSIGHT software and HELP files.

## MINIMUM SYSTEM REQUIREMENTS

- ☐ IBM PC 100% compatible computer
- ☐ Pentium 400 MHz
- ☐ Windows 2000/XP (\*\* Windows 95/98/NT are no longer supported for LabeLase® 1000 and Producer™ applications)
- ☐ 5MB available disk space
- ☐ 32MB RAM (64MB recommended)
- ☐ 1 communications port for connection to the printer (serial, USB or ethernet depending on the communications option provided on the printer)
- ☐ Color monitor (800x600 resolution or higher recommended)
- ☐ LabeLase® 1000 firmware version LL1000P v1.12 or higher
- ☐ LabeLase® Producer™ version 1.61 or higher.

## TABLE OF CONTENTS

<b><u>TITLE</u></b>	<b><u>PAGE</u></b>
Copyright Information	2
Software / Firmware License Agreement	3
Preface / What's New	4
Minimum System Requirements	4
Index (this page)	5
Printer Setup	7
Software Installation	7
System Connections & Power-Up	8
Printer Communications	9
Installing USB Drivers	10
Printer Initialization	14
Using Carrier Plates	15
Printing Tags	16
Changing Tag Sizes	16
Changing Plates	16
Auto Print Feature	17
LabeLase® Producer™ Software	18
LabeLase® Producer™ Differences	19
Tag Layout Tips	20
Visualizing Pocket Placement	20
Special Pocket Shapes	20
Fine Tuning Print Location	21
Printable Plate Area	21
Optimizing Cycle Time on Narrow Tags	22
Diagnosing Print-Quality Issues	23
Printer Configuration & Laser Settings	24
Cycle Time Considerations	25
Best Practices and Helpful Hints	26
Basic Troubleshooting	26
Normal Maintenance & Servicing	28
Lens Cleaning Procedure	28
Air Filter Removal and Replacement	29
Cleaning the Internal Drive Mechanism	30
Fuse Replacement	31

Over-Temperature Shutdown	32
Customer Service	33
Functional Block diagram	34
Serial Port Connections	35
Drawings and Parts Listings	36-40
Laser Safety	41
Declaration of Conformity	42-43

## PRINTER SETUP

The LABELASE® 1000P Plate Printer requires 100-240 VAC, 50/60 Hz, 2.4 A.

**NOTE:** both sides of the incoming line voltage are fused. See the Maintenance section for instructions on replacing fuses.

The LABELASE® 1000P Plate Printer should be positioned so that the power supply cord exits from the back of the machine.

The LABELASE® 1000P Plate Printer should be placed in a temperature controlled environment. This marker, though designed for industrial use, should be treated as any typical computer system and printer. Dirty environments will necessitate a more frequent cleaning schedule for internal optics.

If the printer is housed in a secondary protective enclosure, the two exhaust fans located on the bottom of the printer directly underneath the tag feed drive area must not be obstructed. Ideally the fans should be exhausted to the environment outside the enclosure, with clean & dry makeup air entering the enclosure toward the back of the printer near the foam element air filter.

A 12-foot (3.6 meter) RS-232 serial communications cable is provided for communicating with your Windows-based PC. A USB cable is also provided with the optional USB/ethernet communications module. See the serial connector wiring diagram at the back of this manual for additional information if another serial cable is required.


## SOFTWARE INSTALLATION

Before connecting the printer to your PC, Labelase® Producer™ software should first be installed on your PC.

The easiest way to install the software is to use the Installer Disk that came with your new printer. In addition to installing the correct version of Producer™ for your specific printer model, it will also allow you to configure the appropriate communications interface. In most cases this will allow you to skip the Printer Communications and USB Drivers sections of this manual.

If your original Installer Disk is not available, the latest release of Producer™ software can also be downloaded directly from <http://www.infosight.com/labelaseproducer.htm> . This is a self-contained, single self-installing file. However, it will not automatically guide you through the configuration process for communications, and you must therefore follow the steps outlined in the Printer Communications and USB Drivers sections of this manual.

## SYSTEM CONNECTIONS & POWER-UP:

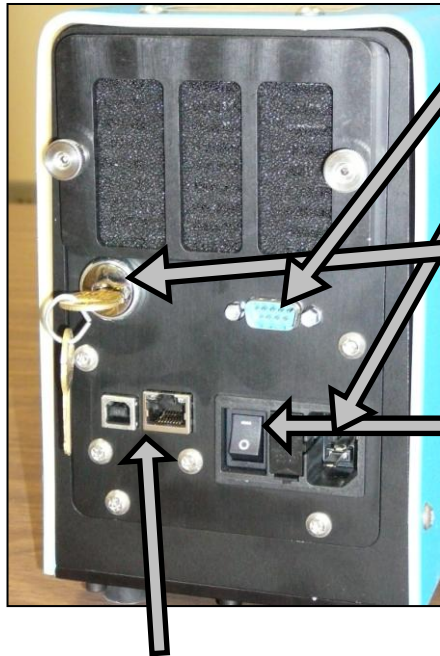

Optional USB & ethernet connectors. See following section of this manual for instructions on installing required drivers.

1. Attach the included RS-232 from the LABELASE® 1000PS Plate Printer to your Windows-based PC running LabeLase® Producer™ software.
2. Insert the AC power cord into a nearby power receptacle. **NOTE: both sides of the incoming line voltage are fused. See the Maintenance section for instructions on replacing fuses.**
3. Place the security key into rear of machine, near the power cord exit point. The key functions as an ON-OFF switch.
4. Turn key to the vertical (ON) position. **NOTE: The security key can only be removed when in the OFF position.**
5. Press the power switch to the ON position (1).
6. Remove E-STOP by twisting the red button on the top of the printer by one-quarter turn clockwise.


**NOTE:** rear panel layouts may vary, depending on the printer configuration




## PRINTER COMMUNICATIONS

The LL1000 series of printers requires a communication link to a PC running Producer™ software. In addition to the standard serial RS232 link, an optional integrated USB/ethernet module is available.

The Producer™ software defaults to a serial port on COM1 and automatically configures the port settings. If your computer has a comm. port other than COM1, you can select that port from the Producer™ main menu, SETUP...PREFERENCES...TAG PRINTER COMMUNICATIONS (note: Supervisor login is required). Select the appropriate port from the pull-down list.

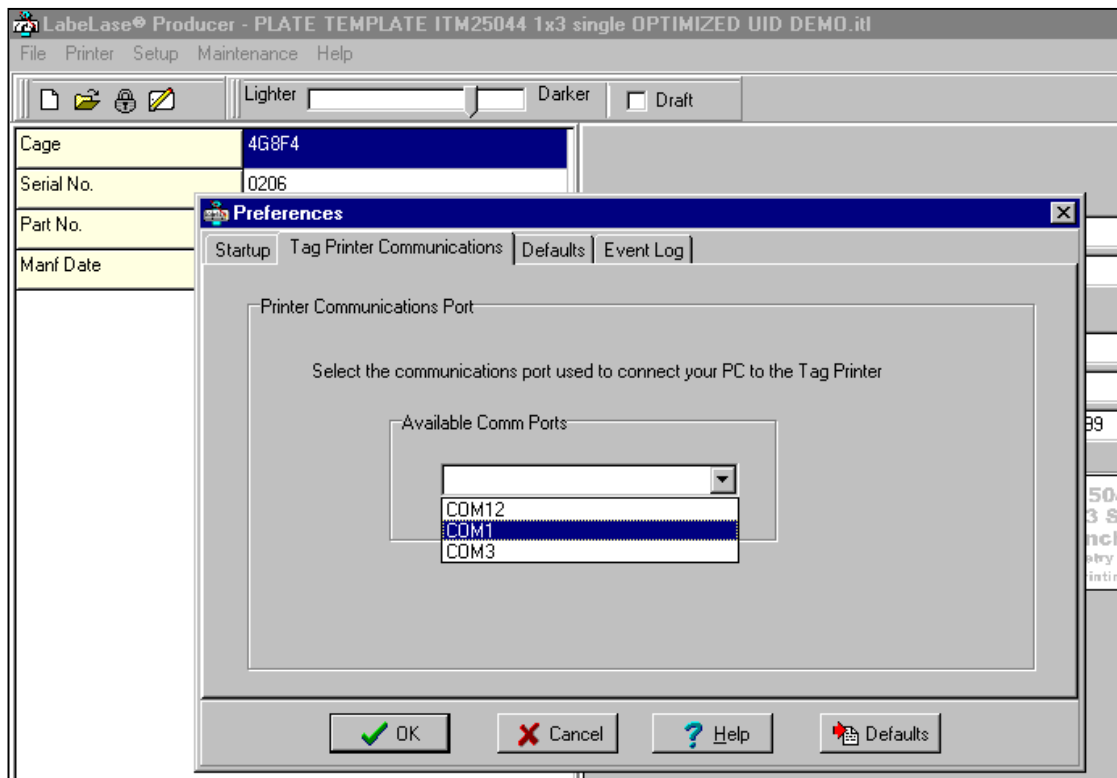


If you are uncertain about which port to use, more details about each comm. port are available in the Device Manager in Windows Control Panel.

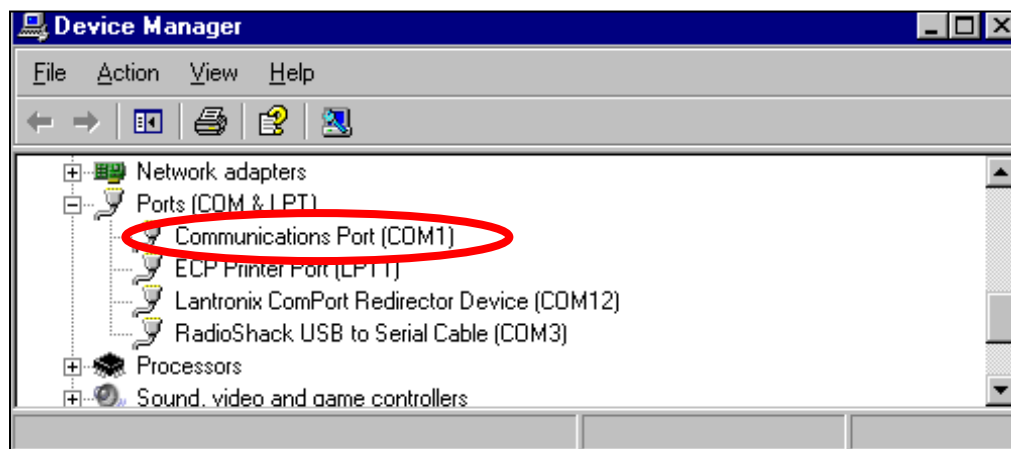


## INSTALLING USB DRIVERS

If your printer includes the USB/ethernet option, you will need to install the appropriate drivers first.

The USB driver is found on the Producer™ installation CDROM. Explore the disk (do not use the Auto Run feature), navigate to the installation directory, and run SETUP.EXE. This will run the VCP Installer program.

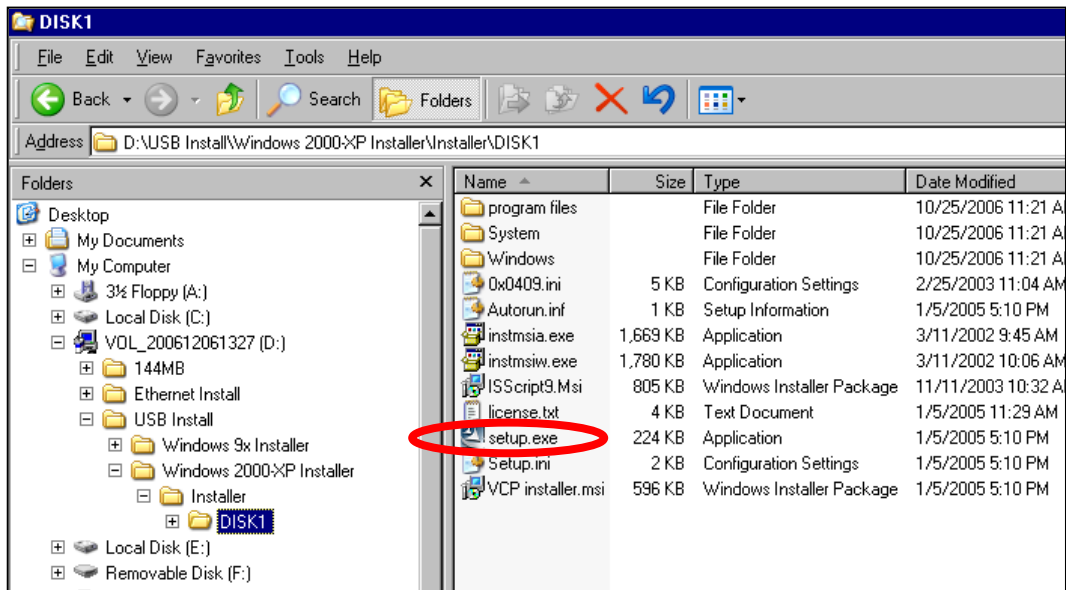

When the VCP Installer has finished, click the Finish button.

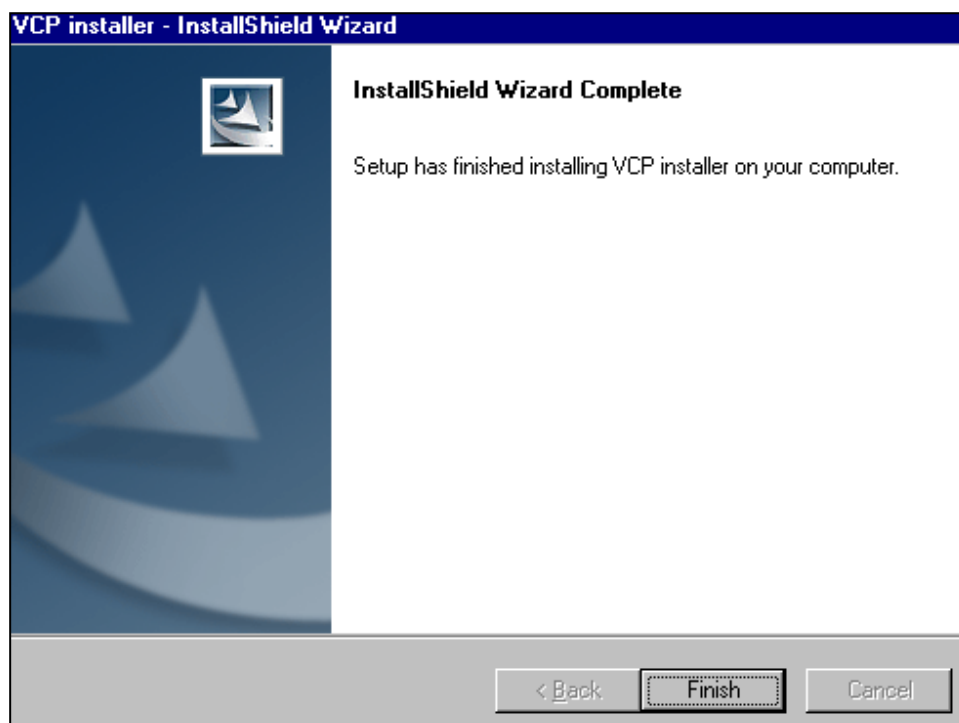


Next, plug the USB cable into an available port on your PC and into the back of the LL1000P Plate Printer. Power on the printer and you will see a New Hardware message for the Adapter.



Followed immediately by the Found New Hardware Wizard for the Serial Device:



Install the software automatically as recommended. When the Wizard has finished installing, click on Finish.

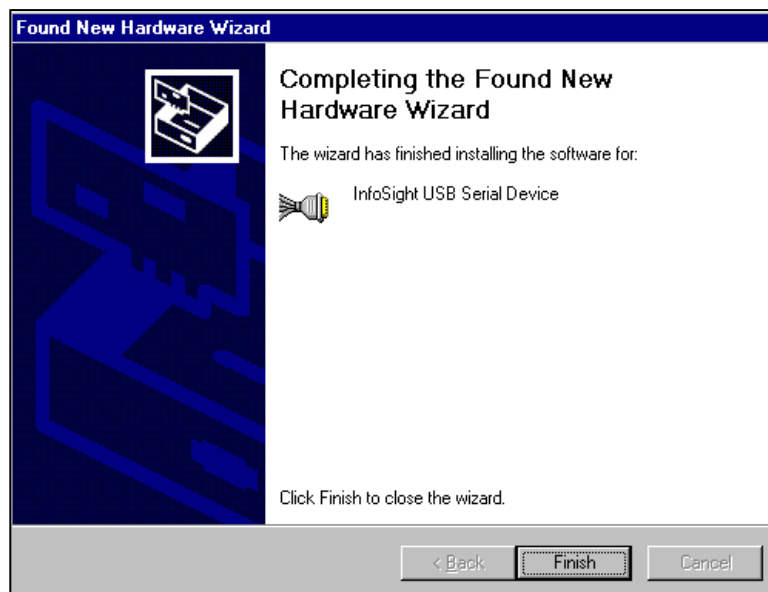


Next you will receive a Found New Hardware message for the Serial Port




Followed immediately by the Found New Hardware Wizard for the Serial Port:




Install the software automatically as recommended. When the Wizard has finished installing, click on Finish.

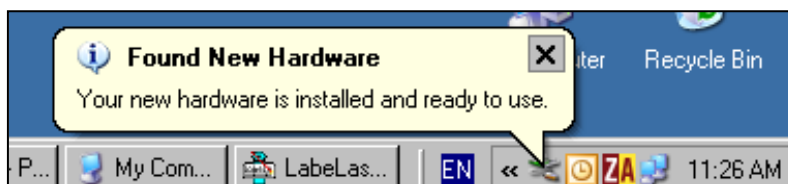

Now return to the Producer™ main menu, SETUP...PREFERENCES...TAG PRINTER COMMUNICATIONS, and select the newly added comm. port which will probably be at the bottom of the list. If in doubt, check the list of Ports in the Device Manager in Windows Control Panel

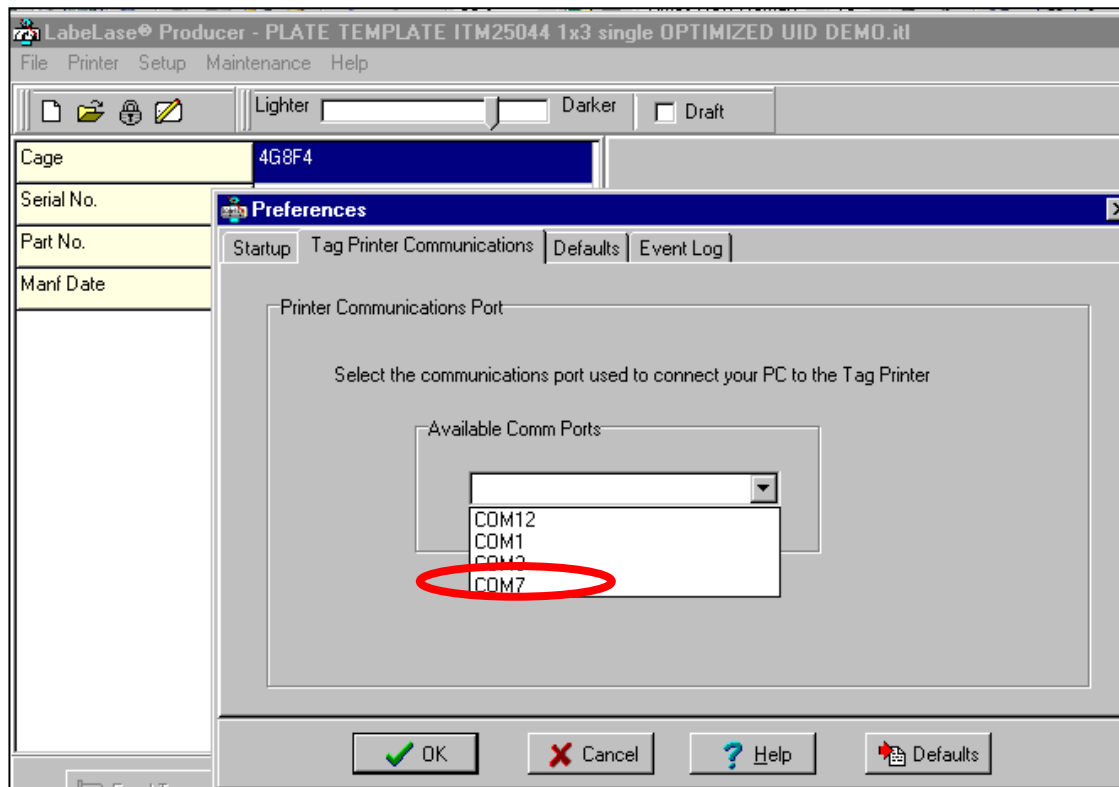

The printer will now be recognized by Producer and you may proceed to print tags.

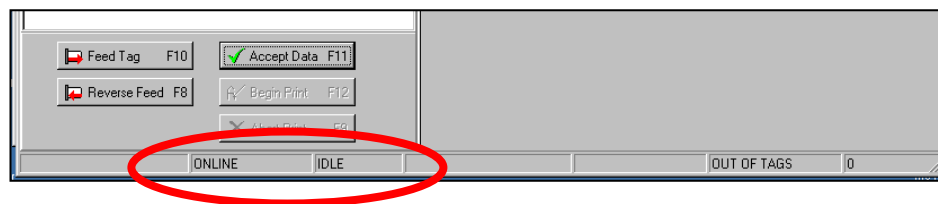


**SPECIAL NOTE:** Once the first printer is installed, each time you connect a new printer to your PC, the Found New Hardware Wizards for both the Serial Device and the Serial Port will launch. Follow the guided prompts to install the software automatically as above, and then select the newly installed comm. port in the Producer™ menu.

## PRINTER INITIALIZATION

1. Start LabelLase® Producer™ software on your PC. This manual assumes you have version 1.61 or higher.
2. Load a pre-existing tag layout, or design a new tag layout. NOTE: designing or changing a tag layout requires SUPERVISOR login. Several sample templates for the LL1000P Plate Printer are provided on your installation CD, and may also be downloaded from [www.infosight.com](http://www.infosight.com).
3. Choose a plate with a tag pocket that corresponds to the tag layout (i.e., matching tag size, orientation & placement on the plate, as well as plate length). Each plate is marked with a unique ITM number which can be included in the filename for the tag layout for future convenience in selecting the proper plate for printing.





4. Carefully insert the plate into the front slot of the Plate Printer, in the direction of the arrows on the plate. NOTE: it is not necessary to place a tag in the plate pocket, unless the AUTO PRINT feature is enabled (see below).

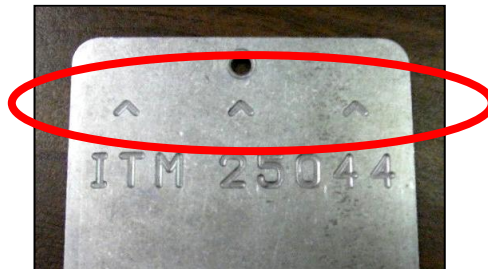


5. The plate will be drawn automatically into the printer and positioned at the “out and ready” position, ready for printing. NOTE: if the AUTO PRINT feature is enabled, the plate will fully enter the printer, printing will begin, and when finished printing the plate will be fully ejected (see below).

## USING CARRIER PLATES



- Each pocket in the carrier plate has one or more small rubber buttons to help hold the tag securely during printing.

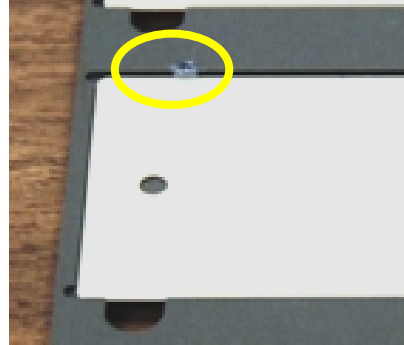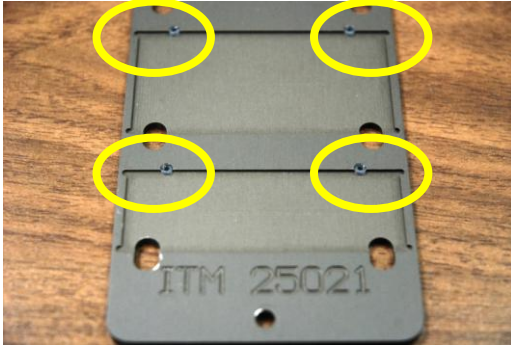

- To load a tag, simply slide it into the pocket towards the buttons, pressing it lightly against the buttons, and snap the tag down firmly into the pocket so that it sits flat.

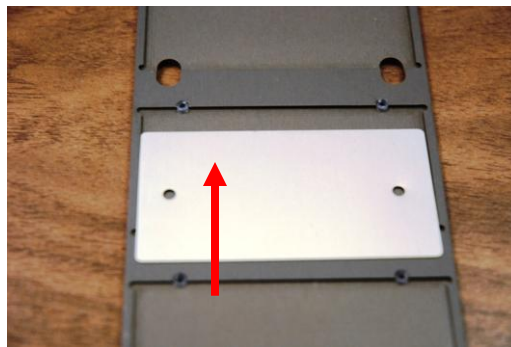


- To remove the tag, use a pencil or other small pointed object to carefully lift the edge of the tag under the milled slot, and pop the tag out of the pocket. Be careful not to use excessive force, or you may bend the tag.

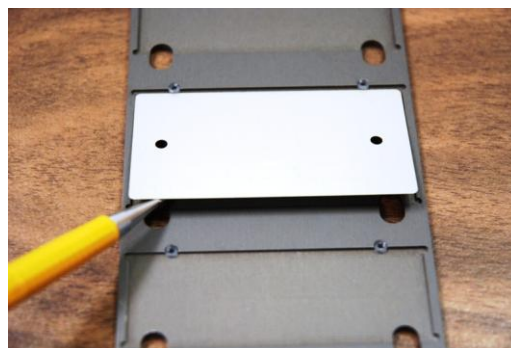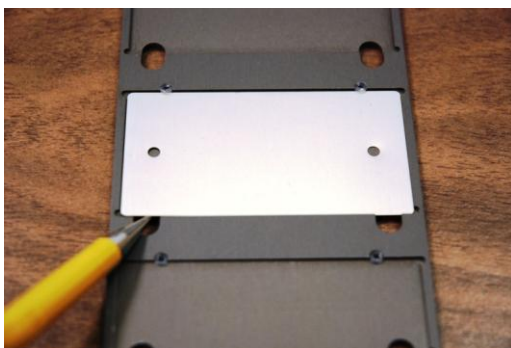



## PRINTING TAGS

9. Once the plate is in the “out and ready” position, simply place a tag in the plate pocket and press the PRINT on the top of the printer. The plate will be drawn fully into the printer and printing will begin. When printing is complete, the plate will return the out and ready position, so that the tag may be removed.
10. Repeat step (6) as many times as required.

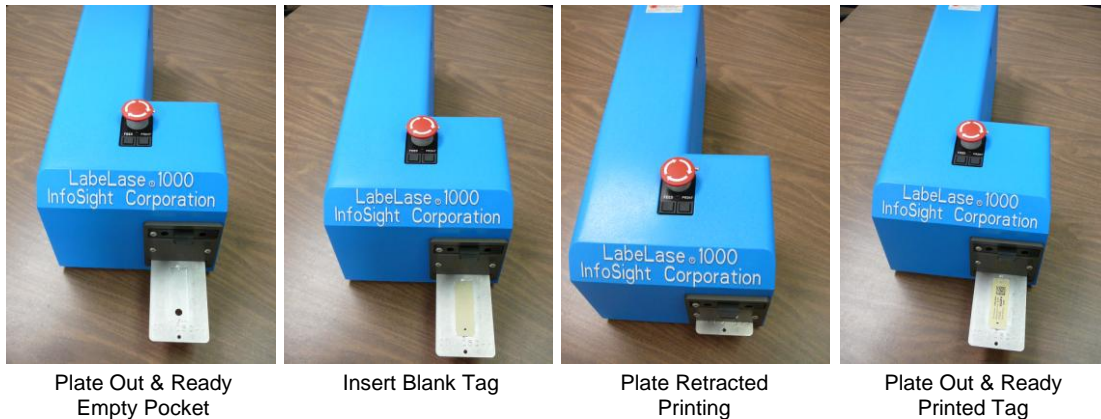


## CHANGING TAG SIZES

11. A single plate may contain a single tag size or multiple tag sizes. If the plate already being used in the printer has a pocket for the new required tag size, simply load a new tag layout into Producer™, load a blank tag into the correct tag pocket, and press the PRINT button on top of the printer.

## CHANGING PLATES

12. To change to a different plate, for example when you need to print a different tag size not found on the current plate, simply press the FEED button on the top of the printer. Pressing it once momentarily will cause the plate to eject from the front. Pressing and holding the FEED button will cause the plate to eject from the rear.
13. Then return to step (2) above, loading a new template and its corresponding plate.

**NOTE:** If you find you are frequently changing plates for just a few different tag sizes, it may be possible to design a single custom plate containing pockets for all your commonly used sizes. Contact your sales representative or our factory for more information.

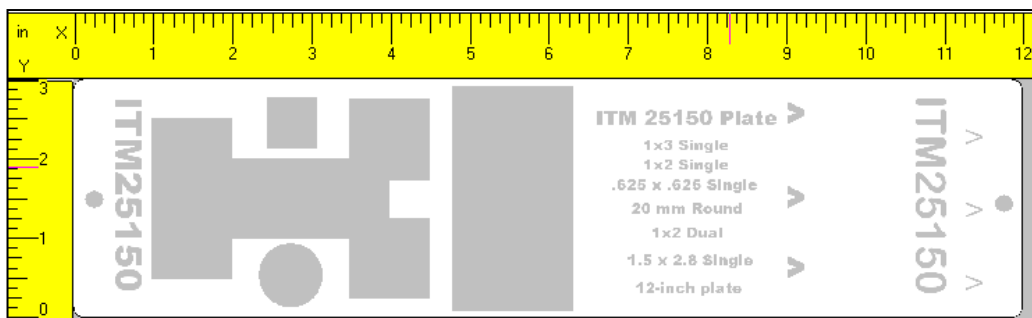




## AUTO PRINT FEATURE

- The LL1000P has been designed with a special AUTO PRINT feature which may be useful in certain circumstances, for example when printing larger quantities of tags in a batch mode.

14. AUTO PRINT is enabled from the SETUP-PRINTER CONFIGURATION menu, which is accessed from the main Producer screen.

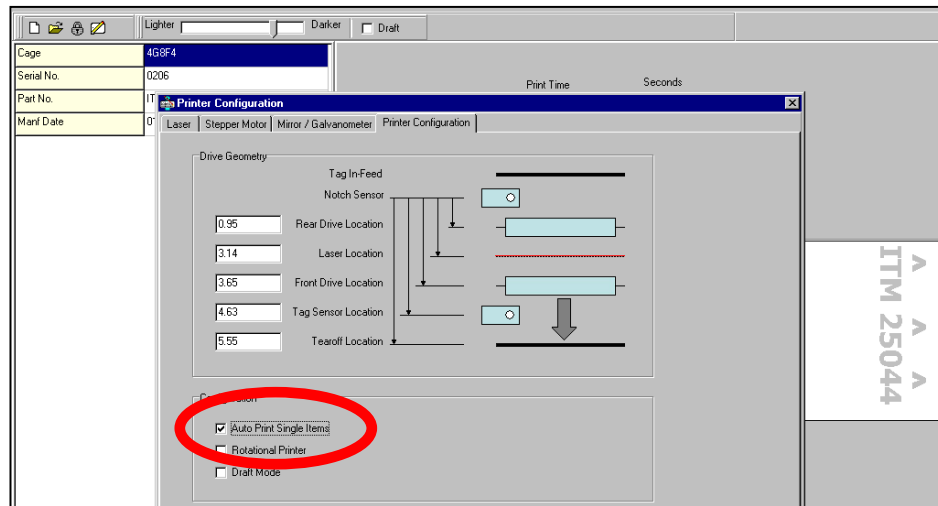


15. Before inserting a plate, first load a tag into each appropriate pocket. Then carefully insert the plate into the marker, as in step (4) above, being sure all tags remain in their pockets.

16. The plate will be drawn automatically into the printer, printing will begin automatically (there is no need to press the print button), and when finished printing the plate will be fully ejected automatically.

- With two or more identical plates, this feature makes it possible to pre-load plate #2 with tags while plate #1 is printing. Then as soon as plate #1 is finished it can be quickly removed and plate #2 inserted. Printing will again begin automatically as in step (13). While plate #2 is printing, plate #1 can be unloaded and reloaded.
- This feature can greatly increase productivity and output when larger quantities of die-cut tags need to be printed in batches.

**NOTE:** Contact your sales representative or the factory for information on obtaining additional copies of your plate, as well as custom-designed plates with multiple pockets.

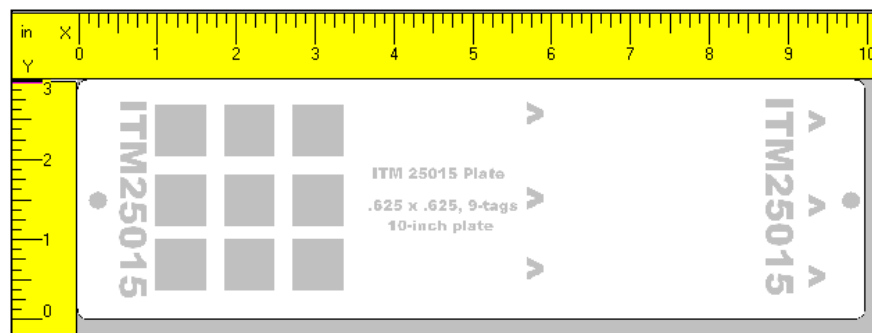


## LABELASE® PRODUCER™ SOFTWARE

LabeLase® Producer™ is an integrated, Windows-based application for complete control of tag design and printing. For complete details, please refer to the ONLINE REFERENCE MANUAL supplied with the software, or on the web at [www.infosight.com/labelaseproducer/index.htm](http://www.infosight.com/labelaseproducer/index.htm).

### Features:


The software has many features designed to provide maximum flexibility to serve the customer's specific marking needs. Some of these features include:

- ❑ Built-in and online (web access) HELP.
- ❑ Total freedom to change tag layout whenever needed.
- ❑ WYSIWYG (“What You See Is What You Get”) user interface for simple and intuitive tag design.
- ❑ New features emulating popular presentation software packages to speed layout and organization of complex designs containing multiple text and graphics fields.
- ❑ An unlimited number of data, text, barcode and graphics fields.
- ❑ Move fields easily with drag-and-drop.
- ❑ Rotate fields in 90-degree increments.
- ❑ Unlimited UNDO-REDO to easily correct mistakes.
- ❑ Optional placement grid with snap-to placement aid.
- ❑ Optional field anchor display shows field alignment.
- ❑ Zoom in/out for detailed display.
- ❑ Tag geometry features such as holes, slots, bare edges and bend lines can be shown.
- ❑ Prints all PC-installed fonts, including multi-byte characters for Asian languages.
- ❑ User-selectable download of message data from a host computer via RS-232, network TCP/IP, or network file transfer. A wide selection of communications protocols includes InfoSight Extended, emulation of Zebra and Intermec standard printers, and simple comma or tab-separated, flat-file formats. Details can be found in the communications chapter of the online reference manual.
- ❑ Operator entry of message data, for example if the host computer is unavailable.
- ❑ Easy control over printer setup parameters such as laser speed (i.e., formerly known as the “heat” setting for different types of laser tag material) and high/low pixel density (i.e., “draft” and “normal” printing modes)
- ❑ Auto-print feature for single tag printing.
- ❑ Auto-incrementing of all text and number fields.
- ❑ Option to make text and graphic fields “non-printable”
- ❑ Option to make non-printable fields visible in the File Open dialog, and on the Producer™ main screen.

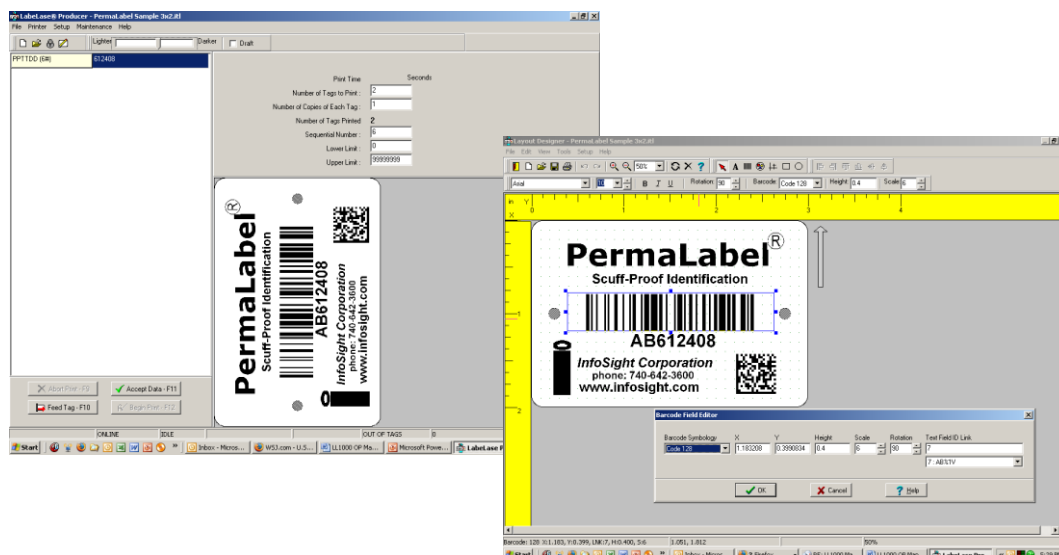


## LABELASE® PRODUCER™ DIFFERENCES

- There are several new features and a few differences in the appearance of the Producer™ main screen when running the LL1000P Plate Printer, compared to the standard roll-feed versions of the Tag Printer.

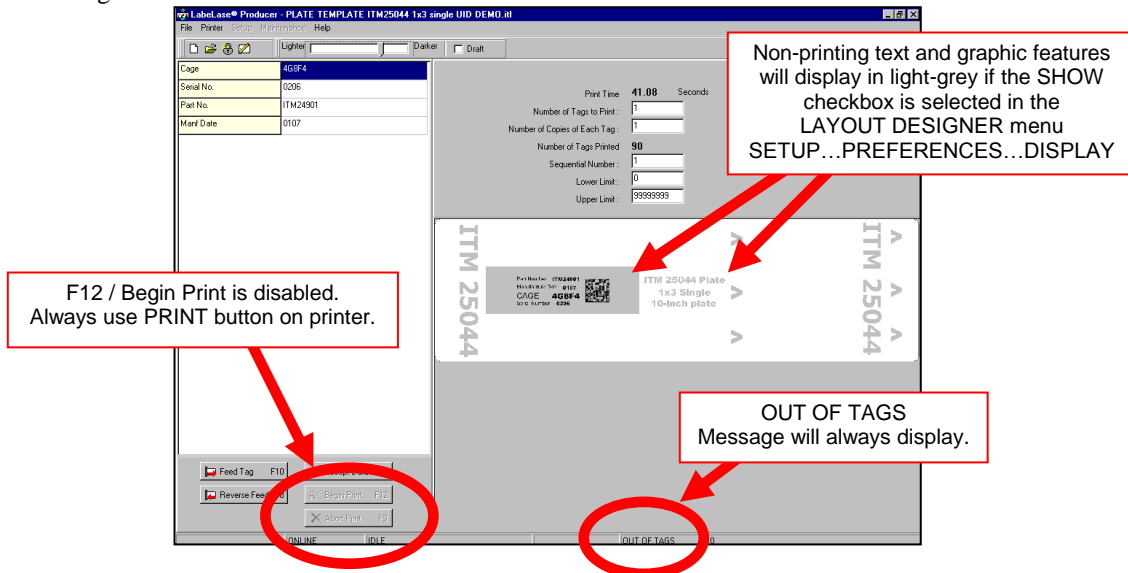


- There are also a few differences in the Producer™ Layout Designer main screen. The example below is based on a standard 1x3 pocket centered on a 3"x10" plate (ITM 25044) as shown below, but the main points will apply to all plates of all sizes.

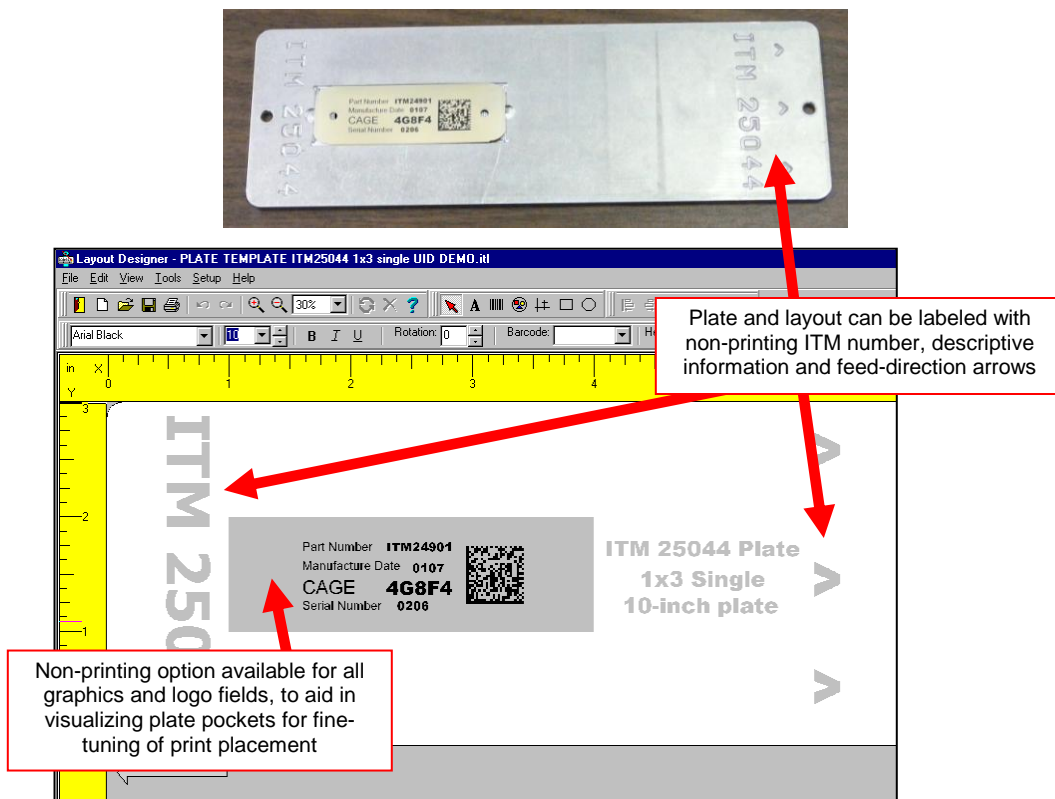


## TAG LAYOUT TIPS

- A. VISUALIZING POCKET PLACEMENT. The location of the plate pocket(s) can be visualized by sizing and positioning an appropriately shaped graphic object, and setting the HIDE parameter checkbox.

Normally the graphic object image will be “filled in” with light-grey shading. If desired, the FILLED checkbox can be unchecked, leaving behind the outline of the box. Line thickness can be adjusted as necessary to aid in visibility.

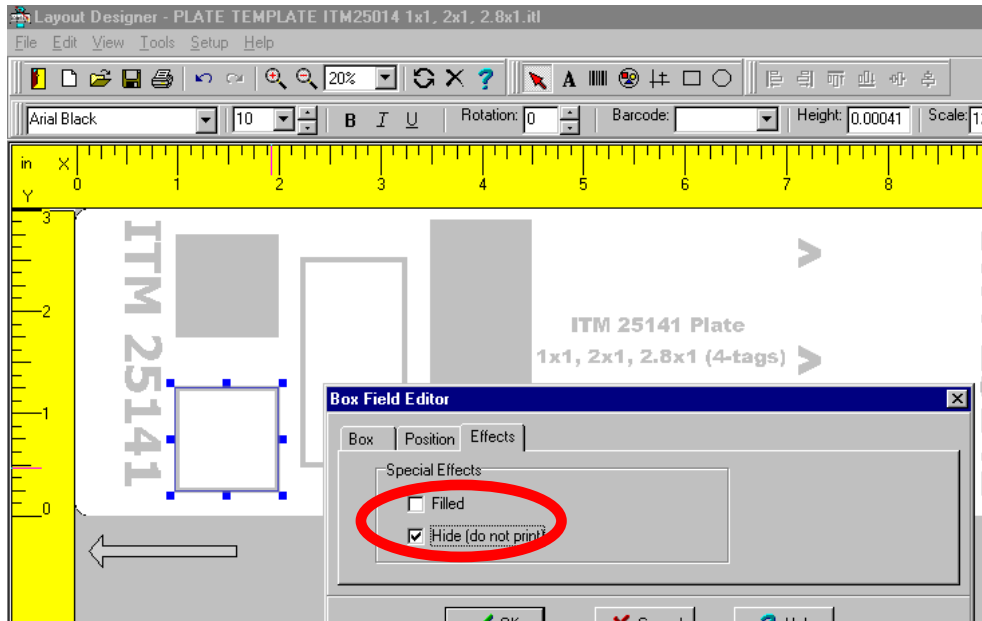

- B. SPECIAL POCKET SHAPES. To help visualize pockets for custom-designed die-cut tags, special “logo” images can be designed in a graphic program such as MS Paint, saved as a monochrome bitmap, and imported directly into Producer.

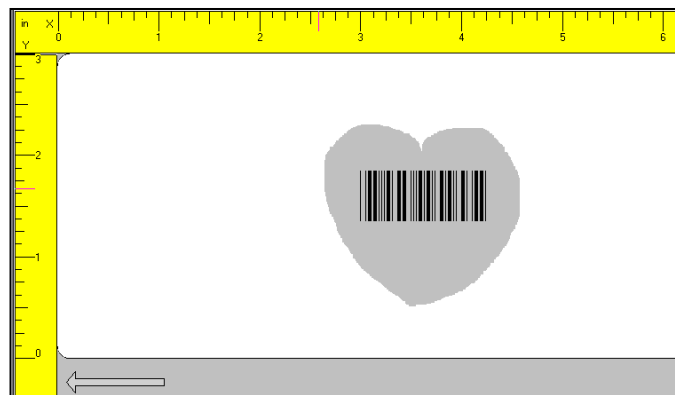

**NOTE:** Contact your sales representative or the factory for information on obtaining custom-designed plates and die-cut tags for your special applications.

- C. **FINE TUNING PRINT LOCATION.** Once the basic layout with data and barcodes has been created for a particular tag, actual print location relative to geometric tag features such as holes, slots and corners, may require fine tuning. This may be caused by errors in the assumed versus actual location of the pocket; by normal manufacturing variations in the tags, plates and printer; or by calibration modifications in the printer.


To adjust print location, simply “click and drag” the printed fields, save the layout, and print another test.

NOTE: moving non-printed fields, such as pocket outlines, will not move the printed fields. The pocket outlines are intended as visualization aids only.

- D. **PRINTABLE PLATE AREA.** Normally the tag layout template will already be created with the pocket outline in the correct nominal location. Producer™ provides the flexibility to modify existing layout designs and create all-new designs, with very few software restrictions. However, for proper functioning of the LL1000P plate marker, the “printable” area of the plate is restricted.

The first 2.5 inches on the right of every plate (end of the plate with the entry arrows) and the last inch on the left end of every plate are reserved by the printer for proper feeding of the plate in and out. Attempts to print in these areas of the plate will be ignored by the laser.


Thus, in the example of a plate for a 1x3 tag, although the physical plate length is 10 inches, the “printable” area is limited to approximately 6.5 inches of length.

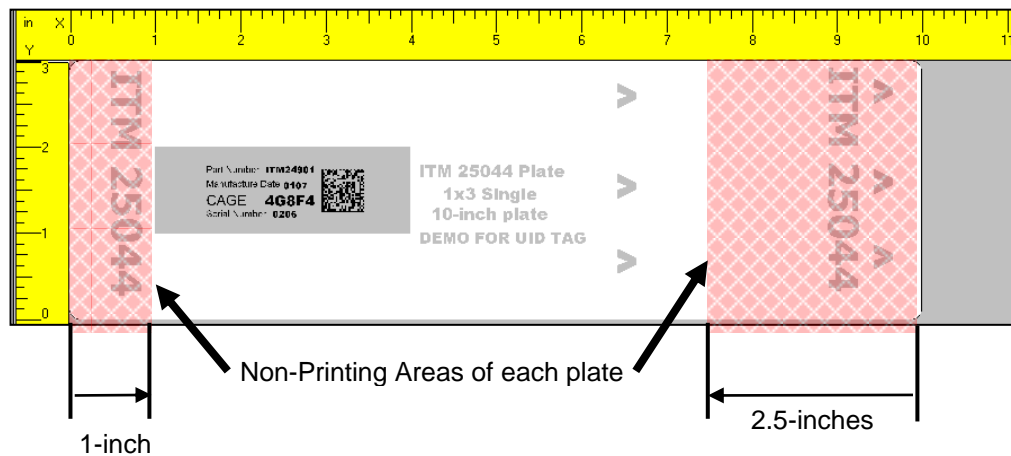

- E. **OPTIMIZING CYCLE TIME ON NARROW TAGS.** The LL1000P printer has been designed to print across the full 3-inch width of every plate. However, in some cases the actual tag width may be significantly less than 3-inches, and a cycle time improvement can be achieved by optimizing layout parameters.

In the case of a 1x3 tag printed picket-fence style (long tag dimension parallel to plate length), the physical plate width is 3-inches but the pocket only uses 1-inch of actual plate width. Reducing the programmed tag width (Layout Designer...Setup-Geometry-Dimensions) to more closely match the tag & pocket width dimension will significantly reduce printing cycle time.

**NOTE:** it will be necessary to first move the tag layout fields “down”, to align them to the Y=0 coordinate, before reducing the tag width.

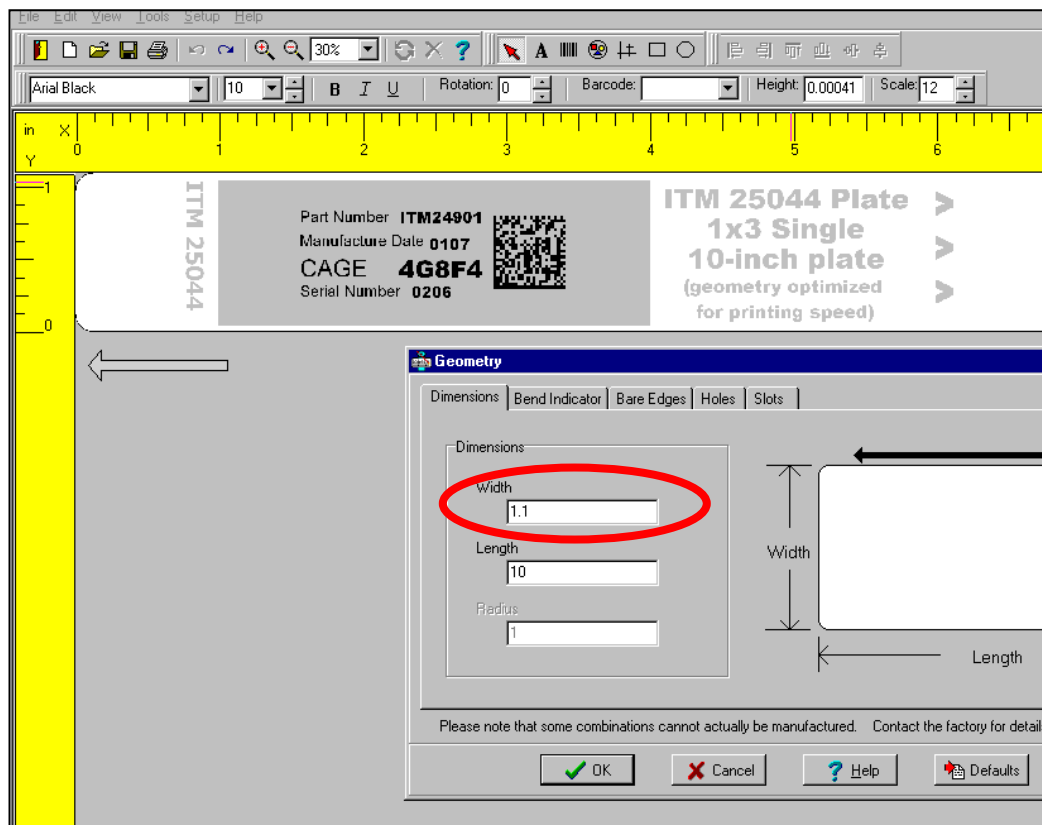

**NOTE:** for fastest cycle times, a tag size and orientation which permits printing the long dimension ACROSS the plate instead of along the plate is preferred. For example, a 2.80 x 1.00 tag will generally print faster than a 1.00 x 3.00 tag.

## DIAGNOSING PRINT-QUALITY ISSUES


If the tag is not securely seated in the plate pocket during the complete printing cycle (e.g., if the tag is not flat or if the tag is smaller or larger than the pocket size), imperfect printing may result.

Check that the tag and plate are properly matched.

Check the condition of the small rubber buttons in the pocket. A magnifying glass may be helpful. If the buttons are missing or damaged, contact your sales representative or the factory for a replacement.

It is also possible to reduce the maximum and minimum stepper frequencies for the internal plate feed rollers. This is accomplished from the Producer™ main menu, go to SETUP...PRINTER CONFIGURATION...STEPPER MOTOR. See the built-in help screens for more information.

## POSSIBLE PRINTING ISSUES

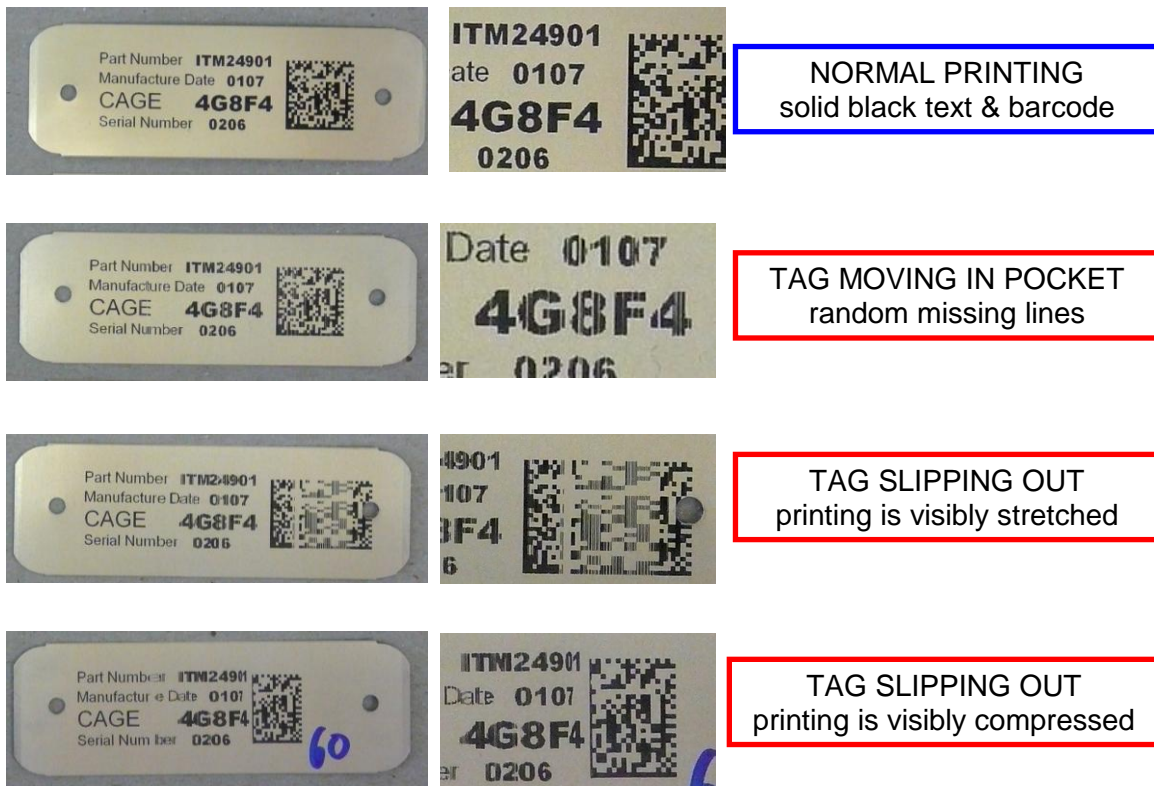

## PRINTER CONFIGURATION & LASER SETTINGS

The LabeLase® 1000P printer and LabeLase® Producer™ software are designed with a high degree of flexibility and user-control, to enable the system to be used in a wide range of applications and on an ever-increasing array of laser-markable materials.

Calibration and configuration settings are accessed in LabeLase® Producer™ under SETUP-PRINTER CONFIGURATION. On-line help instructions will guide you through each of the available settings. The most common parameters for fine-tuning the performance of the printer beyond the easy-to-use LIGHTER/DARKER SLIDER BAR are LASER SPEED, LASER OFF TICKLE, and LASER ON DUTY CYCLE, all of which are found under the LASER tab. Each of these parameters separately and together can be adjusted to create the right balance of black/white contrast, fineness of detail and cycle time.

As laser speed is increased printing cycle time will be faster. In general, as laser speed increases, duty cycle must also be increased to achieve the same relative blackness.

“Tickle” controls the readiness of the laser to fire and helps maintain consistency of marking across the tag surface. Some tag materials are more sensitive to power variation than others, but in most cases this parameter can be left at its factory setting.

Typical Range of Settings (DRAFT mode OFF):

- Laser Speed: 50-75 ips (1270-1905 mm/sec)
- Laser Off Tickle: 7-15  $\mu$ s
- Laser On Duty Cycle: 60-95%

Each printer is calibrated in our factory before shipping, and the results are recorded on two tags as shown at the right. Save these tags in the event you ever want to return the printer to its original factory configuration.


Experience has shown the following settings to be a good starting point for the most common types of tag material. Each individual application may then be fine tuned to achieve the right balance of cycle time, fineness of detail, and black/white contrast.

**Typical Laser Settings (DRAFT mode OFF)**

	Hot Tag™	Pic-Anneal®	PermaLabel®
<b>Laser Speed</b>	70	60	55
<b>Tickle</b>	15	15	15
<b>Duty Cycle</b>	95%	95%	95%



**Calibration Tag**

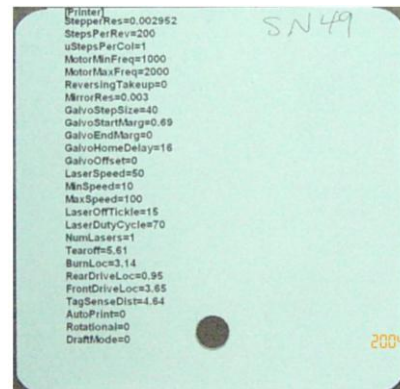



**Factory Settings**




## CYCLE TIME CONSIDERATIONS

Tag layout, plate/pocket design, and printer configuration can have a significant influence on cycle time. Here are a few techniques that in many cases can significantly speed printing.

1. Select DRAFT mode. When DRAFT mode is on, stepper and mirror resolution, laser speed, font sizes, and barcode and graphic scales are automatically adjusted.
2. Increase laser speed (move slider bar to LIGHTER). It may be necessary to increase Laser Duty Cycle to maintain black/white contrast.
3. Use ARIAL BLACK font for text, to create darker easier-to-read characters. Also try using the BOLD font setting instead of a larger font size.
4. Design printing to run ACROSS the tag at 90° rotation (right angles to tag feed) rather than down the tag at 0° rotation (printing parallel to tag feed is slower).

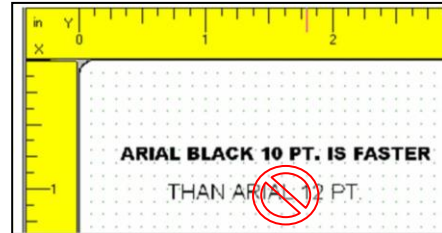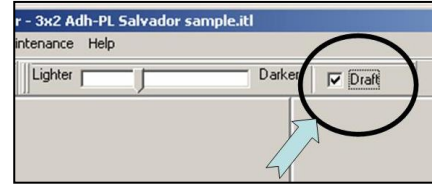


Cycle time is an important consideration when choosing a die-cut tag size. Tags with the long dimension fitting ACROSS the carrier plate will generally print faster than those which run ALONG the carrier plate.

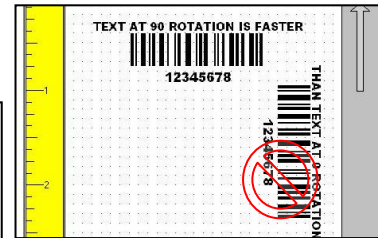


5. Avoid drawing graphic boxes around text or other graphics with long vertical (parallel to tag feed) lines.

Avoid printing boxes or shapes to visualize the outline of a die-cut tag. Instead, use the HIDE checkbox feature for graphic objects.

6. Combine text strings into fewer lines. A single long line of text is more efficient than several short lines of text (at 90° rotation, parallel to tag feed).

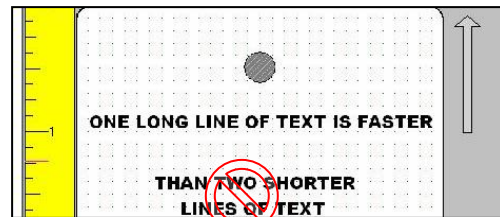

7. Keep graphics/logo X-scale and Y-scale factors equal to 1. If the graphic or logo must be re-sized to fit on the tag, use an external application such as MS PAINT to change the dimensions of the image and re-save the BMP file before importing into Producer™.

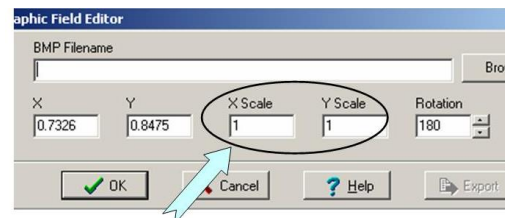

## BEST PRACTICES AND HELPFUL HINTS

To facilitate sharing of best practices among users, InfoSight has created an online DISCUSSION FORUM. You may access the forum via our home webpage or directly at <http://www.infosight.com/forums/>.

## BASIC TROUBLESHOOTING

**Service during normal business hours (Monday-Friday, 8am-5pm Eastern US time): 888-642-3600 or +1-740-642-3600**

**Emergency after-hours service: +1-740-642-4666.**

### **Red LED Status Light on top of printer, next to FEED and PRINT buttons:**

- ☐ OFF: no power to laser (power cord, key switch, power switch). Printer must be re-initialized by removing & re-inserting plate after power is restored.
- ☐ SLOW BLINK: either (a) Plate is at the out-and-ready position, or (b) no Plate is inserted.
- ☐ STEADY ON: printing in progress.
- ☐ FAST BLINK: E-STOP condition.

### **Problem: Printer does not respond to print button.**

- ☐ Check power cord.
- ☐ Check key switch.
- ☐ Check E-STOP.
- ☐ Check that a plate is in position and the printer has been correctly initialized.
- ☐ Check communications cable to PC.
- ☐ Producer software must be running on the connected PC.
- ☐ Bottom of main Producer screen indicates printer status – “ONLINE”, “ESTOP” or “UNKNOWN MODE”. If UNKNOWN MODE, check communications cable and settings.
- ☐ From within Producer, click on HELP-ABOUT. If the FIRMWARE VERSION is blank, your PC does not see the printer. Check communications cable and settings.

### **Problem: Out of tag message on PC screen.**

- ☐ This is normal for the LL1000P Plate Printer. No action required.

### **Problem: Printing seems to stop unexpectedly and/or printed information seems to be missing at the beginning or end of the tag.**

- ☐ Check the tag layout for any print fields in the reserved “non-printing” areas of the plate (see previous section in this manual).
- ☐ Verify that the programmed plate length matches the actual physical plate length. From the LAYOUT DESIGNER, go to SETUP...GEOMETRY.

### **Problem: Tag print appears very light, fine lines appear to drop out.**

- ☐ Reduce laser speed (DARKER)
- ☐ Increase Laser Duty Cycle.
- ☐ Increase Laser Off Tickle (SETUP-PRINTER CONFIGURATION).
- ☐ Final output lens may require cleaning (see Maintenance section below).

### **Problem: Tag print shows “shadows”**

- ☐ Decrease Laser Off Tickle (SETUP-PRINTER CONFIGURATION).

### **Problem: Tag print not aligned correctly on the tag**

- ☐ Use Producer™ Layout Designer to adjust the layout.

- ❑ The printer may need to be re-calibrated. See the Troubleshooting & Maintenance / Feed and Tag Adjustment section of the built-in help in Producer™.

Problem: **Barcode too long for tag size.**

- ❑ Reduce number of characters in barcode data.
- ❑ Use more efficient barcode symbology.
- ❑ Reduce barcode scale.

Problem: **Tag print doesn't look normal, some lines are missing, the barcode is stretched and/or compressed.**

- ❑ The tag may be moving in the plate pocket. See the section of this manual on Diagnosing Print-Quality Issues.
- ❑ The plate may be slipping in the drive rollers. Reduce the maximum and minimum stepper frequencies. From the Producer™ main menu, go to SETUP...PRINTER CONFIGURATION...STEPPER MOTOR. See the built-in help screens for more information.

Problem: **Printer seems to function correctly and sounds normal, but the tag is blank with no printing.**

- ❑ Check the laser speed setting, if it is too fast (LIGHTER setting) there may be insufficient laser power to activate the tag coating. Move the slider bar to a DARKER setting.
- ❑ Check the final pass-through lens to be sure it is properly installed and not blocked.
- ❑ Check the tag layout to make sure it contains printable data. In the FIELD EDITOR of the Producer™ layout utility, look under the EFFECTS tab and make sure the HIDE box is not checked.
- ❑ An over-temperature condition may have caused a temporary automatic shutdown of the laser tube. Refer to the over-temperature shutdown section of this manual for more information..


## NORMAL MAINTENANCE & SERVICING

The only regular maintenance required is periodic cleaning of both surfaces of the final pass-through lens to remove dust, and cleaning or replacing the rear air filter. Additional cleaning or maintenance requires removal of the laser cover, contact InfoSight for instructions.

### LENS CLEANING PROCEDURE

**CAUTION:** LASER OPTICS ALIGNMENT SHOULD ONLY BE PERFORMED BY A QUALIFIED TECHNICIAN.

The lens slide is secured with a SECURITY TORX screw to prevent unintended opening.

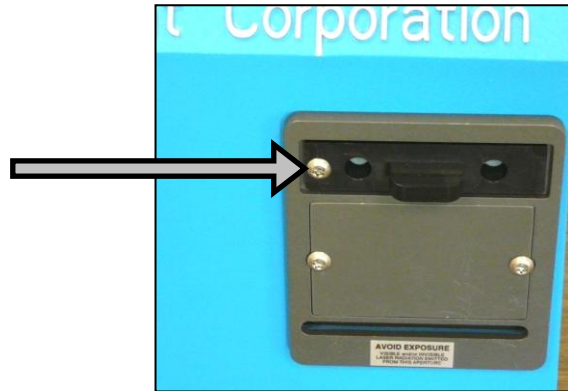

After removing the security screw, carefully open the slide to expose the lens.

Carefully perform the cleaning procedure described below, then re-insert the lens slide and secure it with the security screw.



**CAUTION:** DO NOT TOUCH LENS WITH FINGERS OR ANY SUBSTANCE CONTAINING ALCOHOL, OR PERMANENT DAMAGE MAY RESULT.

#### LENS CLEANING PROCEDURE:

- ☐ Use a cloth that will not leave any fibers and is not abrasive.
- ☐ White vinegar is recommended. **DO NOT USE ALCOHOL!!**
- ☐ Gently wipe the moistened cloth across the lens so that the liquid evaporates behind the cloth, avoiding streaks.
- ☐ **DO NOT RUB HARD!**
- ☐ **DO NOT USE COMPRESSED AIR TO CLEAN OPTICS!**
- ☐ **DO NOT USE EYE GLASS WIPES CONTAINING ALCOHOL!**
- ☐ For optics that are severely contaminated or damaged, contact InfoSight for replacement.


## AIR FILTER REMOVAL & REPLACEMENT

The LabeLase® 1000P Plate Printer includes a light-duty foam filter element, intended for use in a normal office environment. It is not intended to protect the printer from industrial contaminants or vapors, typical of a factory or mill environment.

As the filter element accumulates dust and pollen over time, air flow through the printer may be reduced. This may cause excessive dust to accumulate on the internal optics (lenses and mirrors), which may shorten their life considerably. Therefore, it is important to monitor the condition of the filter and determine the appropriate cleaning frequency for your specific environment.

At high duty cycles when printing large batches of tags with a high percentage of black (printed) area, reduced air flow may also cause the internal temperature sensor to automatically shutdown the laser tube until it cools back to its normal operating temperature – this is normal.

The filter cover is located on the rear of the printer, and is held in place by two thumb screws.

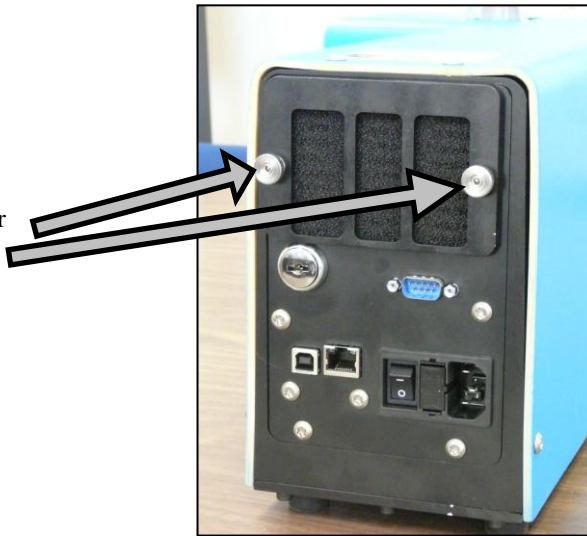

Loosen the thumb screws and carefully remove the cover and the foam filter element underneath.

Carefully blow any lint or dust off the filter, or gently wash it in soap and water. Dry the filter thoroughly before reinstalling.



## CLEANING THE INTERNAL DRIVE MECHANISM


In some environments with excessive ambient dust, limited airflow through the printer and high rates of operation, dust and debris may collect in the drive mechanism area of the printer. Over time this dust and debris may block the laser beam and/or affect the operation of internal sensors and drive rollers.

**CAUTION:** ALWAYS UNPLUG BOTH THE PRINTER POWER CORD AND ALL COMMUNICATION CABLES BEFORE SERVICING THE DRIVE UNIT.

The front cleanout plate may be removed to clean the drive mechanism without removing the printer cover. Extreme care must be used to avoid damaging laser optics, pass-through lens, optical tag & notch sensors, and other delicate components. The pass-through lens should be left in place to avoid introducing dust into the laser optics.



A soft brush or long Q-Tip can be used to loosen any debris, and a small PC keyboard vacuum with a 90-degree or flexible nose piece can be used to remove the loosened debris.

The front cleanout plate is secured with two SECURITY TORX screws to prevent unintended opening

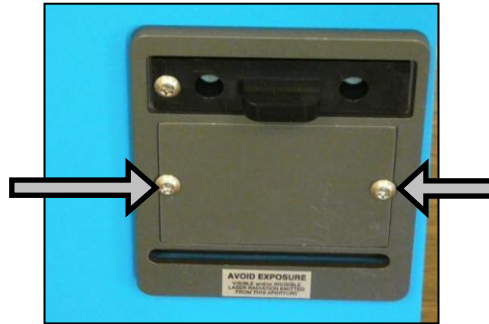

REAR NOTCH SENSOR

FRONT TAG SENSOR

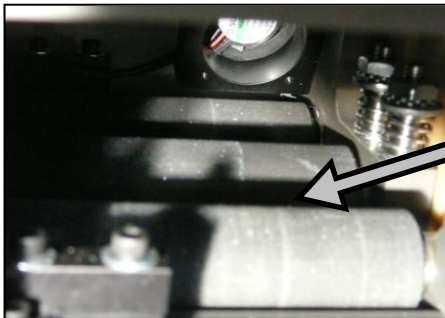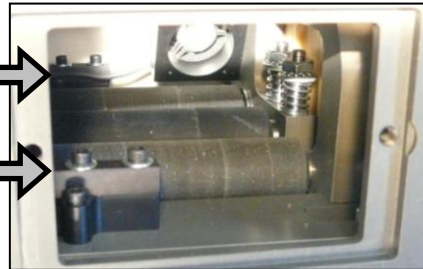

Laser Beam hits the tag between Front and Middle drive rollers. Dust may collect at the extreme left and right-hand sides of this area.

**CAUTION:** ALWAYS REPLACE THE FRONT CLEANOUT PLATE BEFORE CONNECTING POWER AND OPERATING THE PRINTER.

**NEVER OPERATE THE PRINTER WITH THE FRONT CLEANOUT PLATE OR THE PASS-THROUGH LENS REMOVED !!**




## FUSE REPLACEMENT


The incoming AC line is fused on both legs. Before replacing the fuses, first determine and fix the cause of the blown fuses.

**CAUTION: BE SURE TO REMOVE THE AC POWER CORD BEFORE REMOVING THE FUSE HOLDER OR PERFORMING ANY OTHER TROUBLESHOOTING OR MAINTENANCE !**


To replace the fuses, remove the fuse holder on the back of the printer between the power cord input and the on-off rocker switch. The fuse hold only goes back in one-way. If it does not fit easily, turn it upside down and then insert it gently so that it snaps in place.

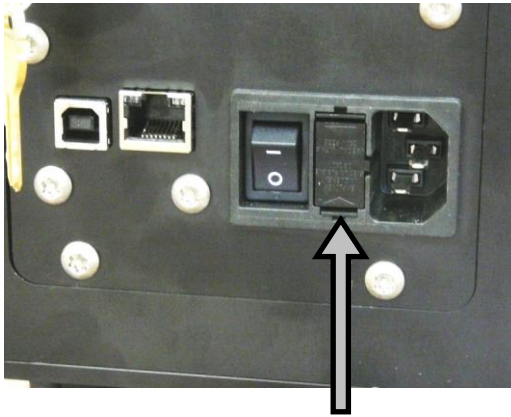

FUSE HOLDER

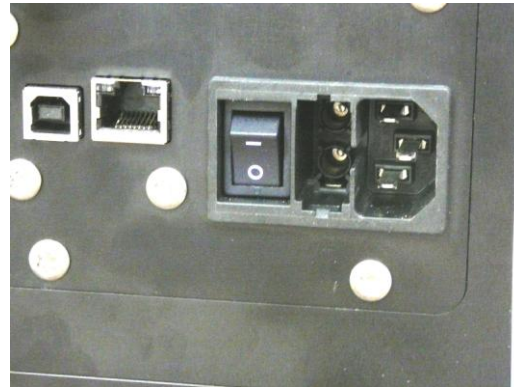

FUSE HOLDER REMOVED

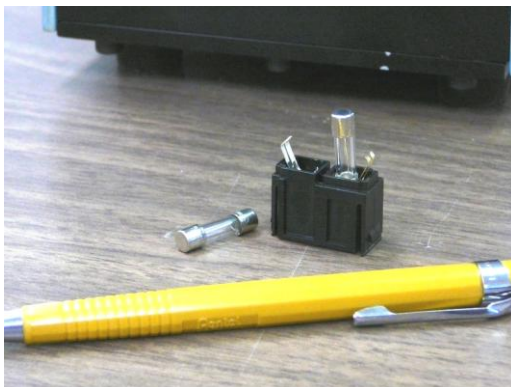

FUSES ARE RATED FOR  
250V / 5A AC

## OVER-TEMPERATURE SHUTDOWN

**CAUTION: NEVER OPERATE THE PRINTER IN PRODUCTION WITH THE COVER REMOVED**

Internal to the LabeLase® 1000 printer, heat is generated by the laser tube and other components. The printer is designed with internal cooling and ventilation fans to help dissipate this heat and ensure long, trouble free operation. As an added measure, the laser tube includes an internal temperature sensor and automatic shutdown circuit. A temporary over-temperature fault shutdown occurs when the laser tube temperature reaches  $60^{\circ}\text{C} \pm 2^{\circ}\text{C}$ .

Under normal conditions in an environment suitable for typical PCs and printers, the internal operating temperature will remain below this level.

However, many factors may affect the internal operating temperature of the printer and shutdown may occur even if the ambient air temperature is below this level. Some of the factors affecting internal operating temperature include:

- Environmental – ambient temperature, humidity, radiant heat.
- Laser Settings – slower laser speeds and higher duty cycles may generate more heat.
- Tag Design – a higher proportion of black/printed area to white/unprinted area on a given tag may generate more heat.
- Application – longer runs of tags may generate more heat.
- Maintenance – reduced airflow (e.g., caused by dirty filters) and slower laser speed than necessary (e.g., due to dirty laser optics) may raise the internal temperature.
- Location – blockages at the back of the machine (filter area) and/or bottom of the machine (beneath tag exit area) may reduce air flow and increase the internal operating temperature.

Should over-temperature fault shutdown occur, only the laser tube will stop firing. The rest of the printer will continue to function as normal, but the tag will feed out with no printing.

This condition can be confirmed by observing the two LEDs at the back of the laser, by viewing through the air flow grating behind the removable air filter. A green LED indicates 30V supply to the laser and it can be cycled on and off by pressing & releasing the large red E-STOP button on the top of the printer. The red LED lights only when the laser is signaled to fire by the internal control board. If the green LED is on and the red LED flashes, but there is no printing on the tag, it is likely there is an over-temperature condition.

First disconnect AC power from the printer, correct the source of the problem(s), and then reconnect AC power.

**CAUTION: ALWAYS WEAR EYE PROTECTION AND OBSERVE SAFE MAINTENANCE PRACTICES WHEN SERVICING ANY LASER PRINTER.**

If the printing soon disappears again, the over-temperature condition has not been corrected.

If the green LED does not light, the power supply may need servicing. Contact the factory for assistance.

If the red LED does not light during printing, the control board may need servicing. Contact the factory for assistance.



## **CUSTOMER SERVICE**


How to reach customer service:

Phone Support	InfoSight Corporation Customer Service offers free phone support to answer questions during normal non-holiday working hours, Monday through Friday 8am to 5pm Eastern time (New York, USA). Call 1.888.642.3600, or outside the USA call +1.740.642.3600.
Emergency Service	After regular business hours, call +1.740.642.4666.
On-Site Service	InfoSight Corporation can dispatch a Field Service Engineer to your facility to perform equipment start-up, repair, maintenance, and training.
Service Contracts	Periodic scheduled on-site maintenance, technical service and extended warranties can be arranged by contacting Customer Service at the number below.
Factory Service	Call Customer Service for a Return Authorization Number before returning equipment to our factory for repair and/or major maintenance.


For more information regarding any of these services, call 1.888.642.3600 (outside the USA call +1.740.642.3600) and ask for Customer Service.

Or, visit us on the worldwide web at [www.infosight.com](http://www.infosight.com)

## Functional Block Diagram

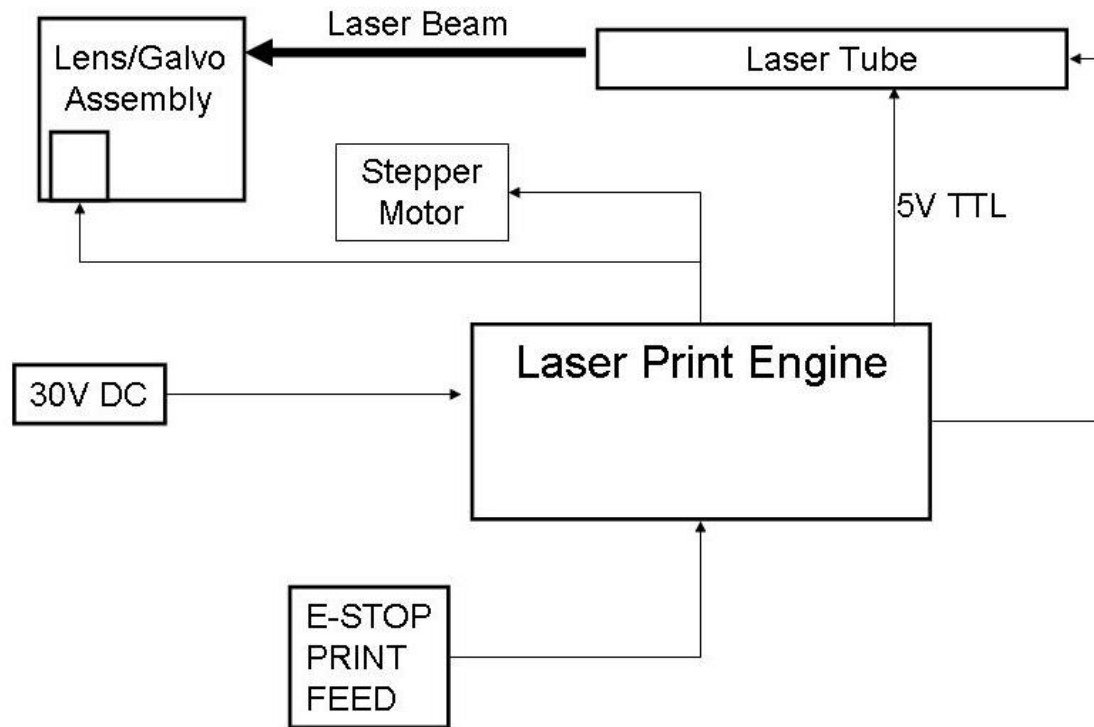

# **LABELASE® 1000 SERIAL PORT CONNECTION TO AN IBM-PC OR EQUIVALENT.**

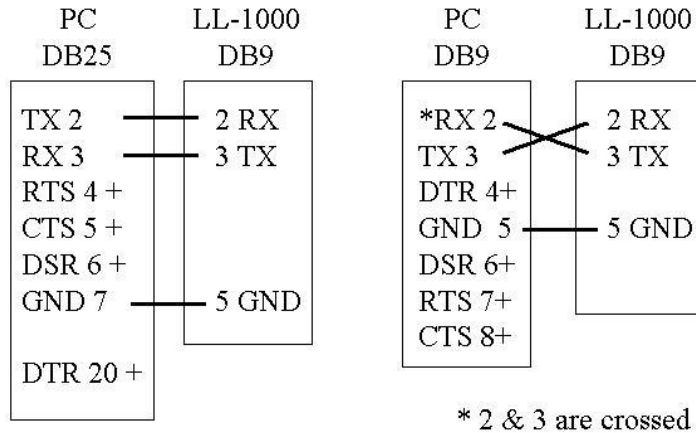

Note: Handshake protocol is XON / XOFF. Communications adapters such as USB to RS232 must support XON / XOFF.

XON is DC1 CTL-Q or 11h or 17 decimal


XOFF is DC3 CTL-S or 13h or 19 decimal









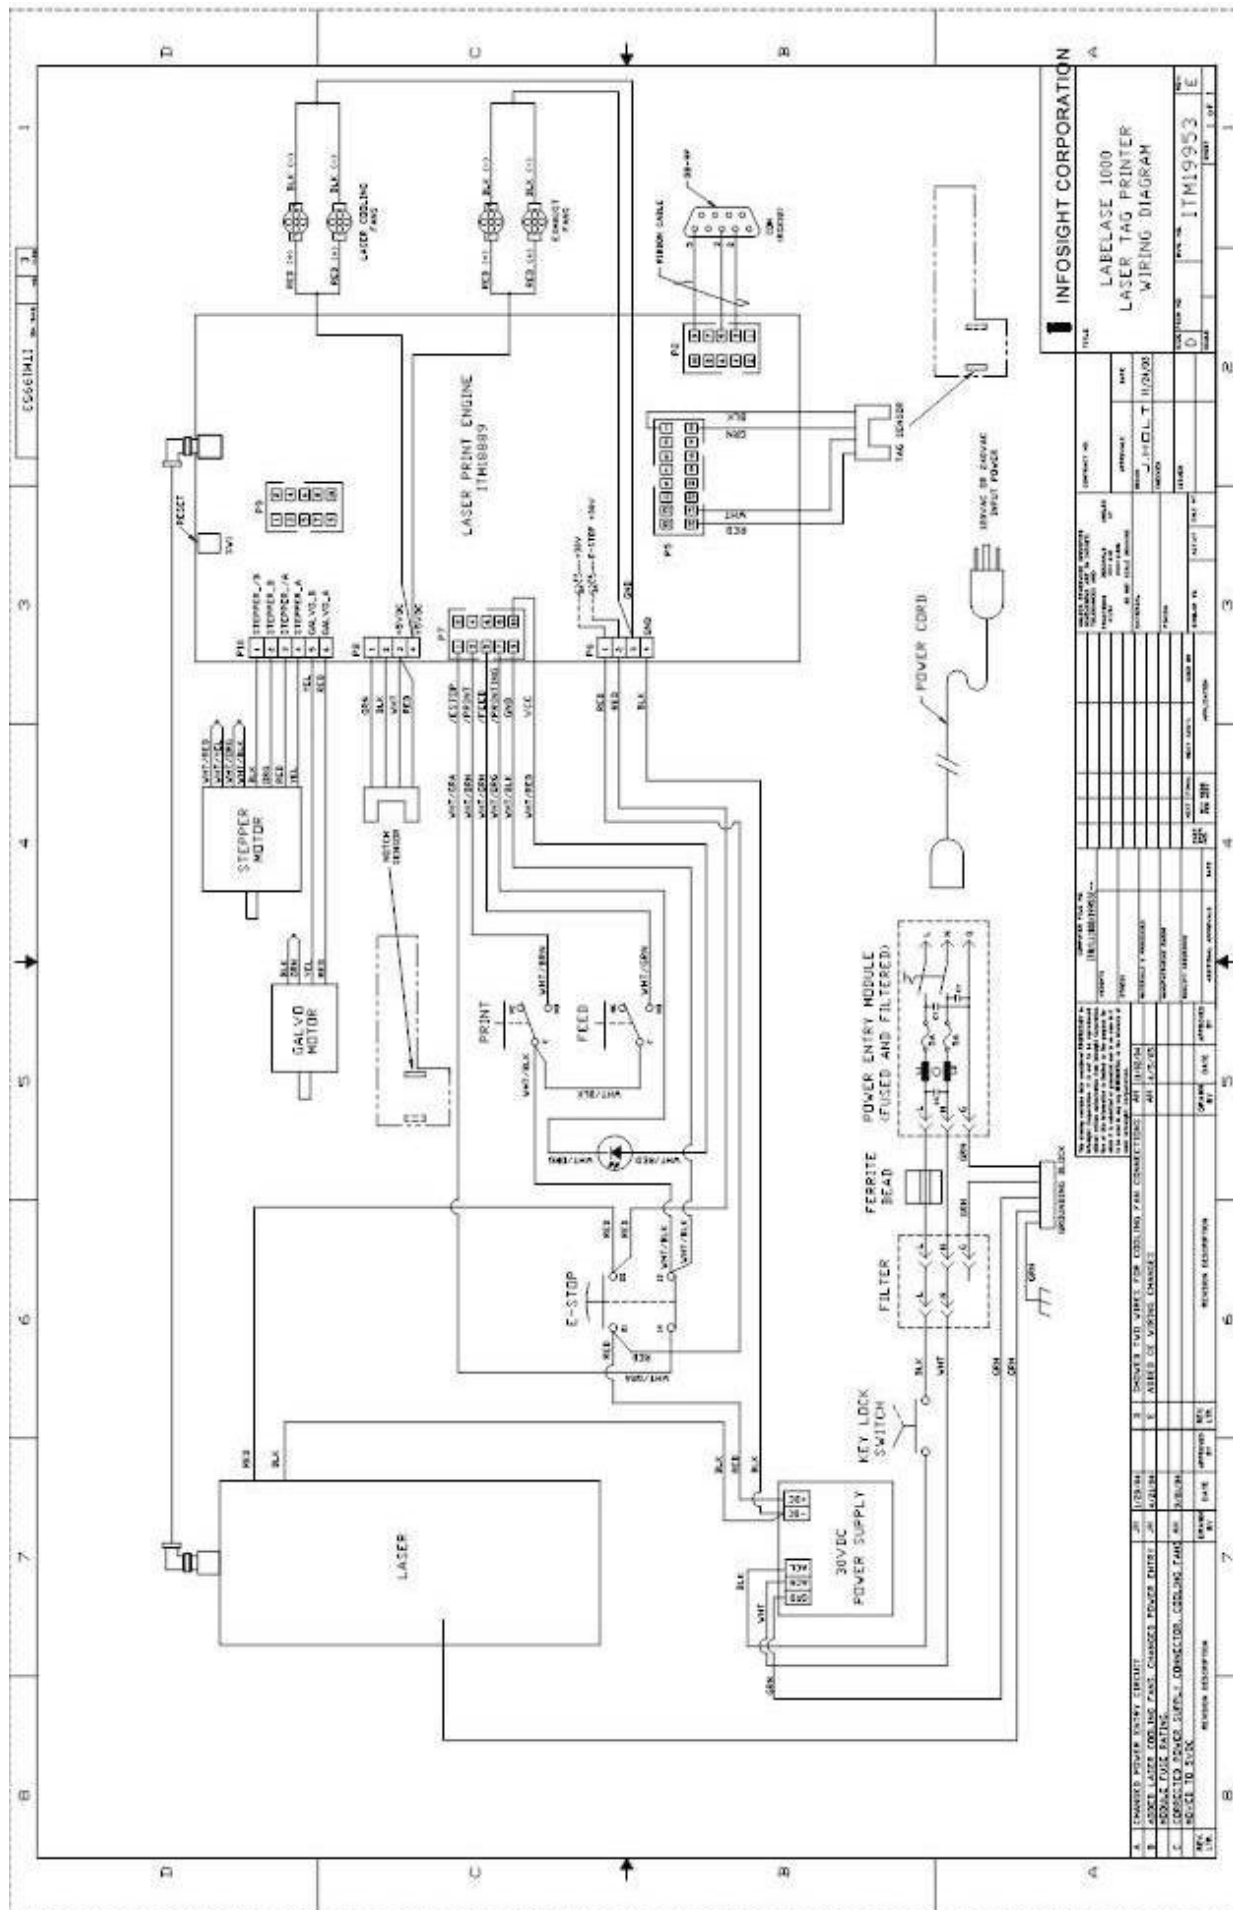



## LASER SAFETY

04/23/03

### Section I: Introduction to Laser Safety

Lasers, like arc welders, are sources of intense light that require certain precautions to insure a safe, comfortable and compliant working environment. This is especially true since the laser included in this marking equipment operates in the infrared (invisible) portion of the light spectrum. The enclosure surrounding the marking area is designed to prevent human exposure to the light emitted by the laser. The following information covers the procedures taken to design a safe, efficient environment for laser marking equipment.

Laser products are categorized into one of four classes based upon the power of the laser light that is accessible to any person during normal operation. These classes range from Class 1, the lowest class requiring no additional safeguards other than those provided by the manufacturer, to Class 4, the highest class that requires additional operator and working environment safeguards for safe operation.

Class 1 laser marking systems include enclosures integral to the workstation that are constructed to prevent human access to the laser beam. Class 1 systems are safe in all working environments; they are installed and operated as any other industrial machine tool. Class 1 laser systems do not require the use of any special laser safety equipment by operators or bystanders during their normal operation.

Class 4 laser marking systems do not incorporate protective enclosures. Extra precautions are required.

The LabeLase®1000PS Plate Printer complies with Class 1 during normal use because of the numerous interlocks provided as detailed in section II.

During service and/or alignment the LabeLase 1000PS Plate Printer becomes a Class 4 device. Servicing should be performed only by a **Qualified Laser Service/Safety Technician!** Because of the Class 4 classification, InfoSight will provide such a person to be available to the end user of this marker.

The nominal power output of the laser used is 10 watts, with a maximum peak power output of 30 watts. It is a CO2 infrared (invisible) laser with a wavelength of 10.57 to 10.63 microns. The Radiant energy and the wavelength are less than Class 1 requirements during normal operation.

### Section II: Types of safety interlocks.

There are several types of safety features provided on the InfoSight LabeLase 1000PS Plate Printer:

Type 1 includes **mechanical switches**. These switches are located atop the marker and on the rear of the marker. These switches remove power supplied to the laser marker, as shown in electrical drawings.

- Switch A -- Large Red, easily accessible, E-STOP operator Emergency Stop Push Button.
- Switch B -- Key switch
- Switch C -- On/Off rocker switch

Type 2 includes **optical sensors**. Sensors monitor whether tag material is in place and the marker is able to move the tag material. These two sensors are monitored by the marking microprocessor.

Type 3 includes **mechanical design**. Here, narrow slots are provided to minimize the release of laser radiation. The beam path from laser tube to final pass through lens is entirely enclosed in a metal shield, with suitable material that will absorb the heat produced by the beam emitting from the CO2 laser.

Type 4 includes **Password Security access**. The Software requires a **supervisor password** to change layout of tags or to alter the operating parameters of the marker itself.

The features and precautions described above are designed with the safety of the user in mind. Should you have any questions or suggestions please contact InfoSight directly.

## **Declaration of Conformity**

### **InfoSight Corporation**

20700 US Rt 23 Chillicothe, Ohio 45601  
(740) 642-3600 TEL (740) 642-5001 FAX

InfoSight hereby declares the equipment specified conforms to the Classification(s), Directive(s) and Standard(s) set forth in this document.

InfoSight produces laser systems within one of two classes as identified and classified by the CDRH. These are Class I and Class IV. (see CDRH 21 CFR (J) 1040.1 - 1040.5). End user of the equipment should be familiar with ANSI, CDRH and OSHA standards for radiation emitting devices as they apply to them also.

### **ANSI Z136.1 - 1993**

We will provide adequate data to the LSO (Laser Safety Officer) enabling LSO to designate NHZ (nominal hazard zone) as required pursuant to Class IV 3.4.1

### **CDRH 21 CFR (J) 1040.1 1040.5**

### **OSHA Publication 8-1.7 Section II Chapter 6**

#### **Certifications:**

##### **EMC Emissions**

EN 55022:1994/A1:1995/A2:1997 Class A ITE emissions requirements (EU)


FCC 47 CRF Part 15 Class A emissions requirements (USA)

##### **EMC Immunity:**

EN 50082-2:1995 EMC heavy industrial generic immunity standard

#### **Name and Publication Date of Standard Used to Evaluate Laser safety:**

IEC 60825-1:1003 + A2:2001

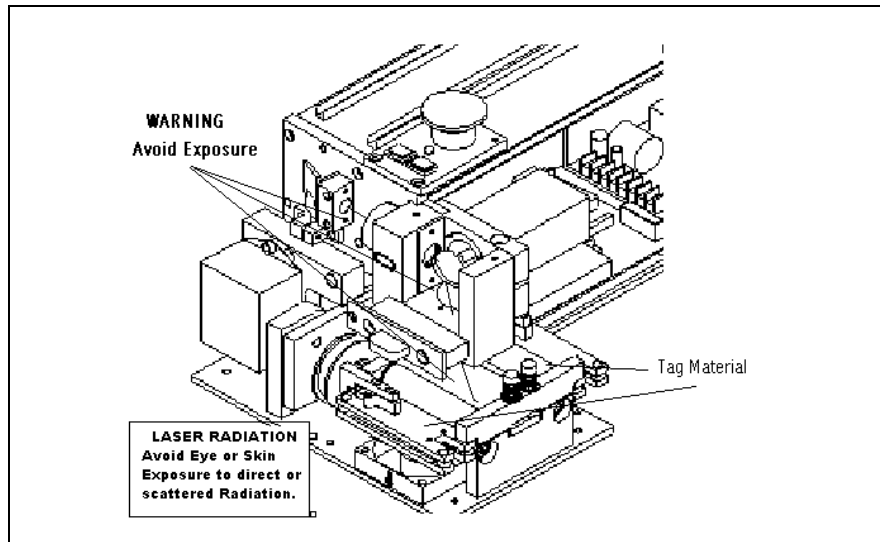

**Note:** InfoSight design guidelines are drawn from ANSI and CDRH



### 1.1.1 LL1000PS Declaration of Conformity

Declaration of conformity

Konformitätserklärung

Déclaration de conformité

Declaración de Conformidad

Verklaring de overeenstemming

Dichiarazione di conformità

We/Wir/ Nous/WIJ/Noi: **InfoSight Corporation**

**20700 US Rt 23**

**Chillicothe, Ohio 45601 USA**

declare under our sole responsibility that the product,  
erklären, in alleiniger Verantwortung, daß dieses Produkt,  
déclarons sous notre seule responsabilité que le produit,  
declaramos, bajo nuestra sola responsabilidad, que el producto,  
verklaren onder onze verantwoordelijkheid, dat het product,  
dichiariamo sotto nostra unica responsabilità, che il prodotto,

#### **LL1000PS**

- to which this declaration relates is in conformity with the following standard(s) or other normative documents.
- auf das sich diese Erklärung bezieht, mit der/den folgenden Norm(en) oder Richtlinie(n) übereinstimmt.
- auquel se réfère cette déclaration est conforme à la (aux) norme(s) ou au(x) document(s) normatif(s).
- al que se refiere esta declaración es conforme a la(s) norma(s) u otro(s) documento(s) normativo(s).
- waarnaar deze verklaring verwijst, aan de volende norm(en) of richtlijn(en) beantwoordt.
- a cui si riferisce questa dichiarazione è conforme alla/e seguente/i norma/o documento/i normativo/i.

#### **EMC Emissions:**

- EN 55022:1998/A1:2000/A2:2003 Class A ITE emissions requirements (EU)
- FCC 47 CFR Part 15 Class A emissions requirements (USA)

#### **EMC Immunity:**

- EN 55024:1998/A1:2001/A2:2003 ITE - immunity characteristics

### 1.2 TEST DATES

November 18, 22-24, 29, 30, December 1, 8, and 9, 2004

**Edward S. ONeal**

**12/29/2006**

**Chillicothe, Ohio**